

Receiver Wiring Adaptor

IMPORTANT

Before starting, compare items on your invoice with items received. Thoroughly check packing materials. If an item is missing, please call **Crutchfield at 1-888-955-6000**.


120 70-7306

Revision 09/14/17

STEP 1 -- MATCH & CONNECT WIRES

- A. Match wires below to the matching function of each wire on your receiver (refer to instructions supplied with receiver). The wire colors of your new receiver may, or may not, match the wire colors of the adaptor. Match adaptor and receiver wires by function, disregarding color.
- B. Your receiver illumination wire could be Orange or Orange/White. As with other wires, match this wire to the illumination wire in this harness by function, not by color. If your receiver does not have an illumination wire, tape off the illumination wire.
- C. Individually tape off any unused wires.
- D. Make final wiring connections following instructions on page 3.

This illustration shows the functions of the independent wires with bare ends. See the illustration on the next page showing functions for the grouped wires in this harness.

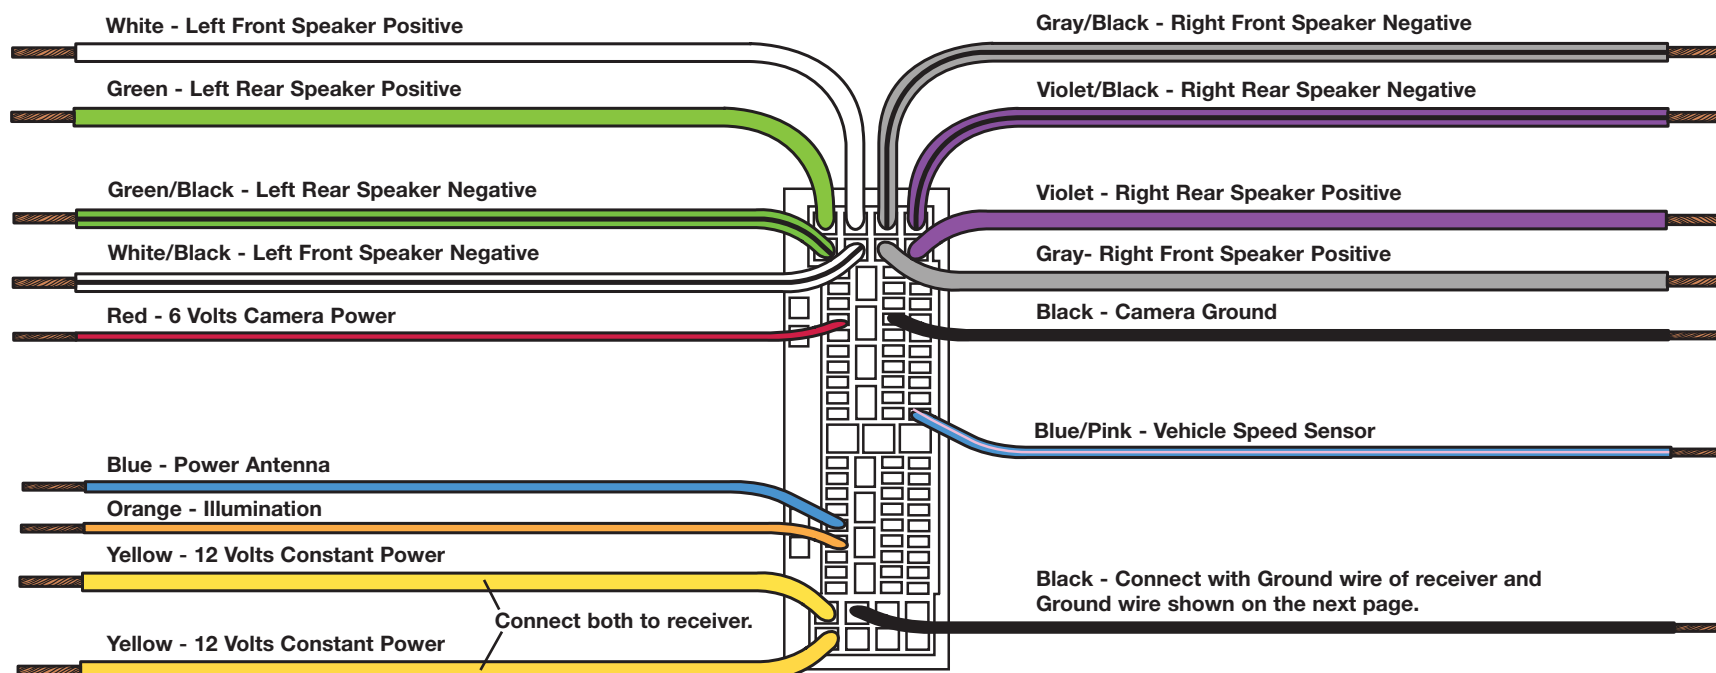


CRUTCHFIELD

Copyright 2017 Crutchfield Corporation



120707306

STEP 1 -- MATCH & CONNECT WIRES

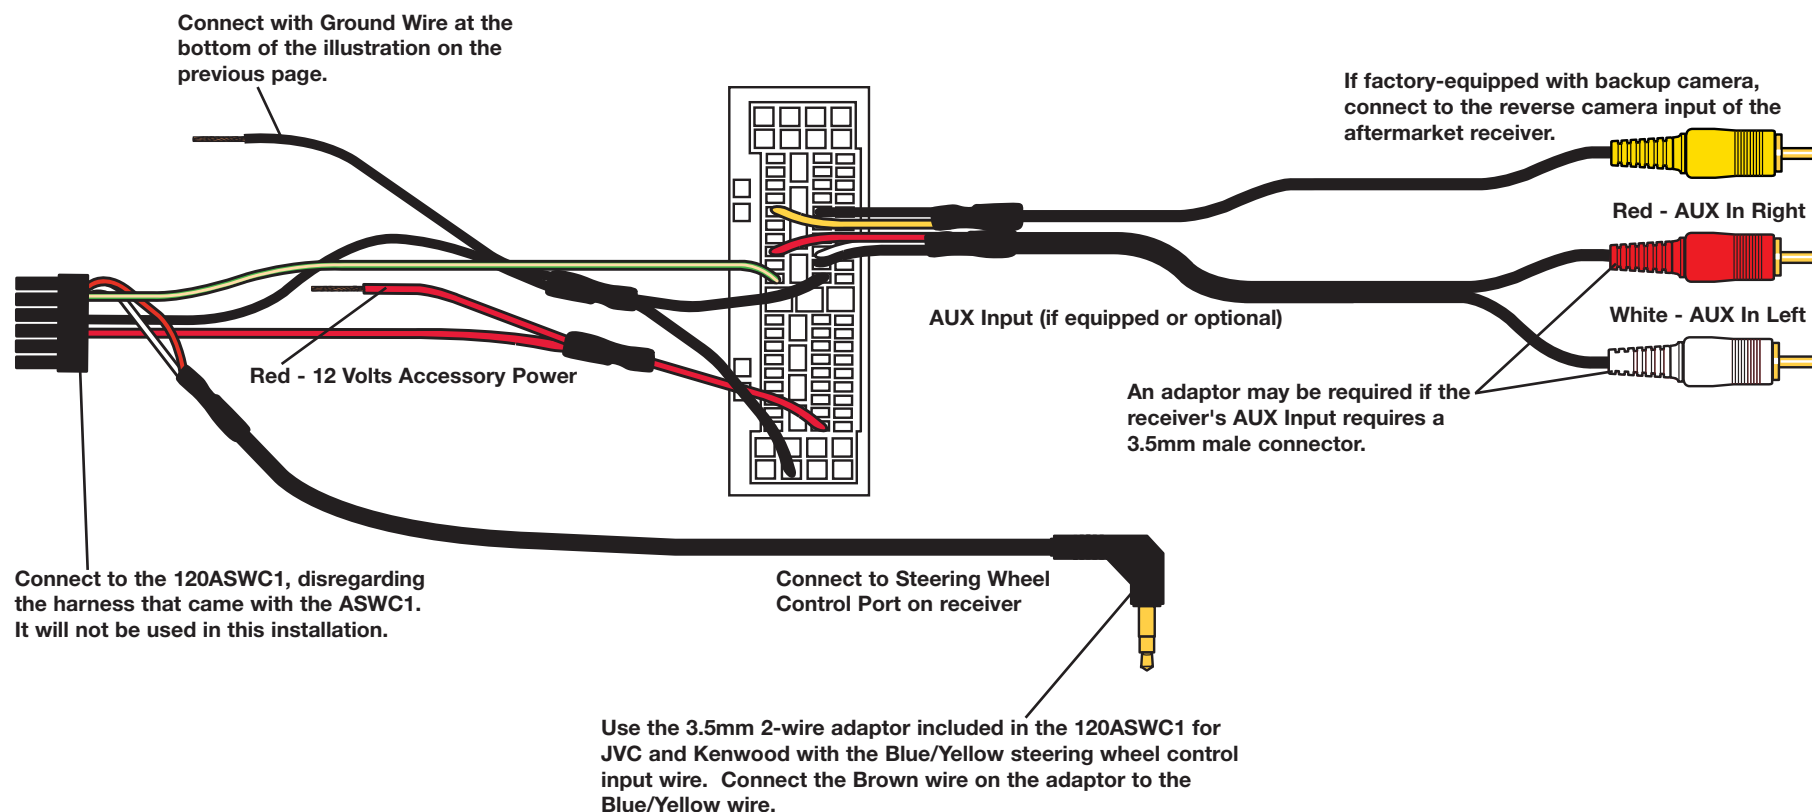

Receiver Wiring Adaptor Connections


120 70-7306

Page 3

STEP 2 -- CRIMP CONNECTIONS

Tools & Parts Required ▶


Wire Stripper/Crimp Tool

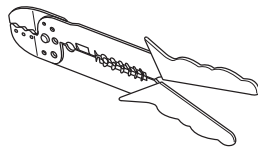


Crimp Caps




A. Strip wires back 1/2".

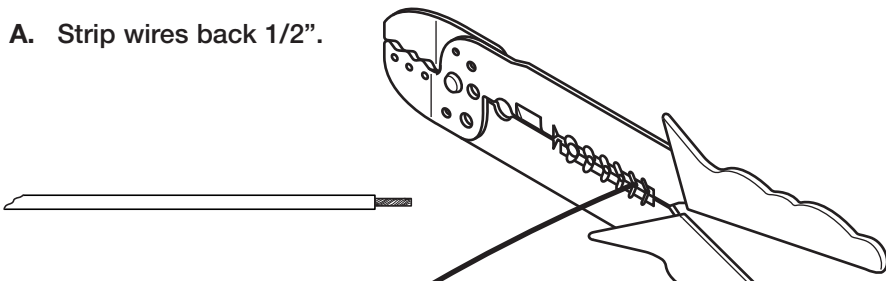

B. Twist wires together and insert in crimp cap.

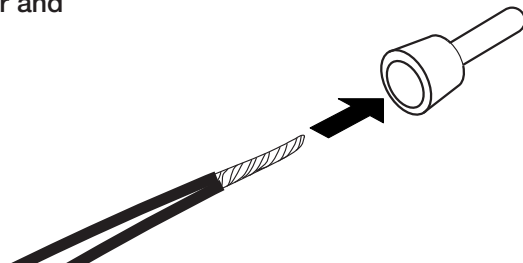


C. Squeeze middle of cap for tight connection.

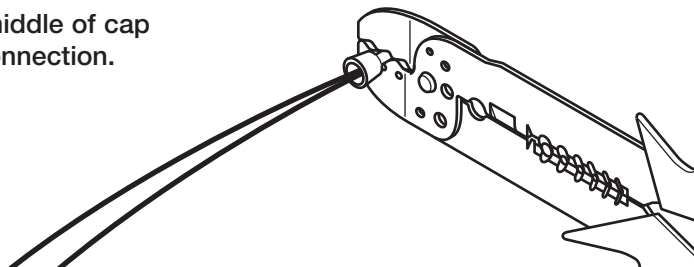

STEP 2 -- CONTINUED

D. Complete crimp connections for all necessary wires.

E. Be sure to wrap any wires from the Wiring Adaptor that are not necessary (wires with no match from the new receiver) with electrical tape.

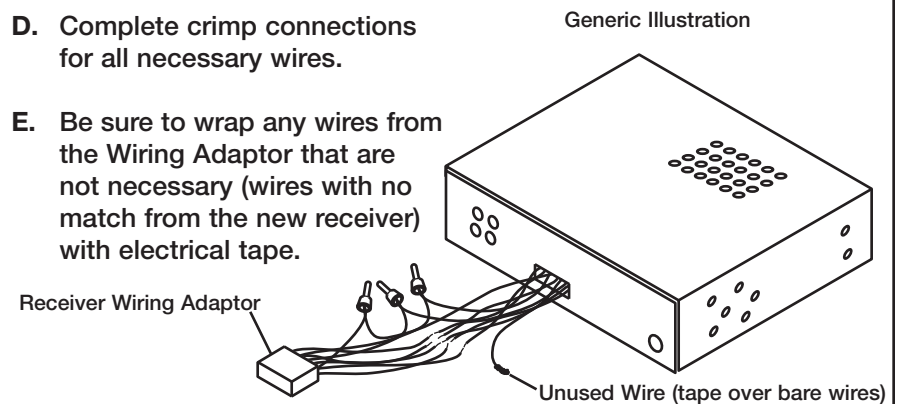

STEP 3 -- APPLICATION

When ready to install the receiver, plug the Wiring Adaptor from the new receiver or receiver assembly into the factory radio harness(es) in the vehicle dash.

